

List of the latest software version

Edition:2022/4/25

Equipment	Model	Name & Type		Latest Version
		Name	Type	
VHF	FM-8800	MAIN	05P0773D/E	0550215-04.04
		RMT HANDSET	05P0781	0550216-01.05
	FM-8900	MAIN	05P0843	0550249-04.01
MF/HF with DSC,WR and NBDP	FS-1570 FS-2570 FS-5070	T-CPU	05P0732	0550205-01.14
			05P0732B	0550225-01.14
		C-CPU	05P0729	0550206-01.09
			05P0811A	0550222-01.14
		DSC MODEM	05P0751B DSC	0550207-01.52
		NBDP MODEM	05P0751/A	0550208-01.03
	FS-1575 FS-2575 FS-5075	TERMINAL	IB-583	0550253-22.06
			IB-581	0550210-22.04
		T-CPU	05P0859	0550243-03.01
		C-CPU	05P0852	0550246-01.05
		TERMINAL	IB-585	0550251-02.02
		COUP	05P0875/05P0883	0550244-01.05
NAVTEX	NX-700A/B	CPU	08P3225	0850196-02.01
ECDIS	FEA-2105	Proccessor unit	HDD	Ver. 4.02
	FEA-2107/2807	EC-1000C	HDD	Ver. 6.52
		LAN ADAPTER	OS	Ver. 2.00 build 002, Jan 24 2007
	FMD-3100	PCU-3000	Processor	V03.31
		PCU-3010		V05.05/V03.31
	FMD-3200/3300	MC-3000S	Sensor Adapter	V05.03/V03.10
		EC-3000	Processor	V05.05/V03.31
		MC-3000S	Sensor Adapter	V05.03/V03.10
VDR	VR-3000/S	DCU	New CPU	245-0031-
			ADP-586-01	245-0031-02.62/V01.62
			Old CPU	245-0031-
			PEB-3730VL2A-J	02.56/01.56/01.02/01.06
		LIVE PLAYER V4		245-0045-01.41
		Maintenance Viewer		245-0046-01.41
		LIVE PLAYER PRO	VR-5034	V3.20
		RAP		245-0026-01.04
		JB		245-0025-01.05
	VR-5000	SYSTEM		V.3.24/V3.26
		LIVE PLAYER	VR-5034 LivePlayer Pro	V3.20
	VR-7000	DCU (Old CPU)	VR-7010	2450102-01.43
		DCU (New CPU)		2450102-01.63
		RAP	VR-7017	2450103-01.63
		Live Player V5		2450104-01.64
		Maintenace Viewer		2450105-01.64
		IF-8530	IF-8530	2450113-01.30
		MC-3000S	Sensor Adapter	V05.03
INM-C	FELCOM 15	RF CON CPU	16P0208A (1.8k)	165-0159-03.13
			16P0208A (1.2k)	165-0159-03.63
		TERMINAL CPU	16P0209A	165-0162-03.08
		PC TERMINAL	---	165-0164-3.08
		RF CON CPU	16P0208A (1.8k)	165-0159-05.07
		TERMINAL CPU	16P0209A	165-0162-05.05
		PC TERMINAL	---	165-0164-05.06
		RTPSETUP	---	165-0179-02.02
	FELCOM 16	RF CON CPU	16P0208B (1.8k)	165-0160-05.05
			16P0208B (1.2k)	165-0160-03.61
		PC TERMINAL	---	165-0166-05.06
	FELCOM 18	RTPSETUP	---	165-0179-02.02
		TERMCPU	16P0283B	1650247-01.31
		PC TERMINAL		1650240-01.31
	FELCOM 19	COMMCPU	16P0282	1650248-01.31
		PC TERMINAL		1650241-01.31
INM-F	FELCOM 70	MCU	MODEM	REL 3.5
		vtLite Mobile	PC TERMINAL	Ver. 7.2
		HANDSET	SF-870-A	Ver1.7.7
		HANDSET	SF-870	Ver1.5.03

Equipment	Model	Name & Type		Latest Version
		Name	Type	
INM-FB	FELCOM 500/250	Communication unit	FB-2000	1650233-09.12
		HANDSET	FB-8000	1650217-09.12
		Incoming indicator	FB-3000	1650220-01.05
Weather FAX	FAX-30	Communication unit	FB-2001	1650268-01.04
		MAIN	09P3218	085-0189-08.01
		PC TERMINAL	FAX-30-APT	085-0201-01.01
GPS	GP-150-ENG	NP	20P8203	2051518-04.05
	GP-150 DUAL	NP	20P8203	2051520-04.05
	GP-170	NP	20P8209	2051542-02.03
		GPS	20P8211	4850465027
	GP-33	MAIN	20P8200	2051530-02.04
		Boot		2051531-01.03
		CAN LD		2051532-01.04
AIS	FA-100	MAIN	24P0015-66	245-0001-002.16
			24P0015-55	245-0001-001.16
		SUB	24P0015-66	245-0002-002.19
			24P0015-55	245-0002-001.19
		H8S1	24P0015	245-0003-001.01
	FA-150	H8S2	24P0015	245-0004-001.02
		H8S3	24P0015	245-0005-001.05
	FA-170	FA-1501	24P0035	245-0018-04.07
		FA-1502	24P0062	245-0021-04.06
	FA-170	FA-1701	05P0892	0550255-02.01
		FA-1702	20P8200	0550256-02.01
Multi Display	RD-33	GPS	20P8211A(GNSS)	4850465027
		MAIN	20P8200A	2651010-01.11
		Boot		2651011-01.03
		CAN LD		2651012-01.04
	RD-20	MAIN	26P0009	2651004-01.03
				2651005-01.08
	RD-50	MAIN	20P0006/B	2651006-01.02
		Starter		2651007-01.05
		Booter		2651008-01.16
ECHO SOUNDER	FE-700	MAIN	02P6280E	0252297016-W25
			02P6280D	0252297016-W25
			02P6280C	0252297016-W25
			02P6280A/B	025-2297-015W18
		PC TERMINAL	---	025-2299-05.02
	FE-800	FE-720 ICP	65P6000-77	655-0101-004
			65P6000-66	655-0101-0A2
		FE-8010	12P1004	1251000-01.02
				1251001-01.04
				1251002-01.10
		FE-8020	12P1000	1251000-01.02
				1251001-01.04
				1251003-01.10
	DS-30	LCP	66P3300	665-0100-212
		MCP	66P3310	665-0110-011
		OCP	66P3340	665-0180-111
		MIF	66P3311	for NMEA
				665-1004-002
	DS-50	for CIF		665-0140-111
		PCP	66P3355	665-0170-109
		VCP	66P3601	665-0400-104
		MCP	66P3310A	665-0410-107
		MIF	66P3311A	665-0122-101
	DS-80	ICP	65P6000-77	665-0101-006
			65P6000-66	655-0101-0A2
			65P6000-33	655-0100-004
		KCP	65P6020-88	655-0120-006
			65P6020-66 and before	655-0120-005

Equipment	Model	Name & Type		Latest Version
		Name	Type	
SPEED LOG	DS-85	DS-8510	65P6110	6550305-01.02
		Starter		6550306-01.01
		Booter1/2		6550307-01.01
		Application1/2		6550308-01.01
		DS-8520	65P6120	6550310-01.02
		Starter		6550311-01.01
		Booter1/2		6550312-01.01
		Application		6550313-01.01
		FPGA		6550314-01.01
	DS-60	MAIN	20P0000A or C (type C: remedy for that LED back light does not turn ON)	6652000-01.03
				6652001-02.04
				6652002-02.13
				6652100-01.03
			66P3950	6652101-02.03
				6652102-02.10
				6652103-00.18
				6652200-01.03
			66P3960	6652201-02.03
				6652202-02.06
				6652203-00.04
				6652204-00.01
		Maintenance software	---	Maintenance software
ARPA/RADAR	FR-21x5 series	For Radar (RP-26)		
		SPU	03P9253A-Q	035-914-9103Q
		RP-26	14P0298	
		For AIS (RP-250)		
		SPU	03P9253E/G	03591840-01.08
		RP-250	14P0371A	035-91860-01.11
		Main (NAVIO)		
		RP-250	14P0371B	035-91870-01.04
		Main (C-MAP)		
		Sub	14P0371A/B	035-9188-001.02
		Commonness		
		ARP-26	18P9002B	185-9038-103
				185-9039-101
	FAR-28x5 series	For Radar (RP-25)		
		SPU	03P9111K-55	035-9096-115
			(-55 and before)	035-9057-127
			03P9111D-66	035-9096-131H
			(-66 and after)	035-9057-134F
		RP-25	14P0261B	035-9094-111H
		For ECDIS (RP-25)		
		SPU	03P9111D-66	035-9096-131V
			(-66 and after)	035-9096-231V
				035-9057-134F
		RP-25	14P0261	035-9094-111G or V
		For AIS (RP-340)		
		SPU	03P9111D-66	035-9190-101.06
			(-66 and after)	035-9190-201.06
				035-9057-134F
		RP-340	14P0371C	035-9192-101.09
				035-9194-101.01
		For AIS+ECDIS (RP-340)		
		SPU	03P9111D-66	035-9190-101.90
			(-66 and after)	035-9190-201.90
				035-9057-134F
		RP-340	14P0371C	035-9192-101.90
				035-9194-101.01
		Commonness		
		ARP	18P9002A	185-9012-107
				185-9013-104

Equipment	Model	Name & Type		Latest Version
		Name	Type	
	FAR-2xx8 series	RCU-014/015/016	03P9649/03P9650	0359506-01.03
		APPLICATION		0359385-01.03
		BOOTER		0359387-01.02
		RPU-025	03P9652	0359453-02.03
		MAIN APPLICATION		0359377-02.03
		MAIN STARTER		0359378-01.02
		MAIN BOOTER		0359379-01.06
		MAIN FPGA1		0359383-01.12
		MAIN FPGA2		0359384-01.08
		SUB APPLICATION		0359380-02.03
		SUB BOOTER		0359382-01.06
		RTR-105/106/107/108/109	03P9561(MAG)	0359484-01.29
		SPU BOOTER		0359280-01.09
		SPU APPLICATION		0359281-01.29
		SPU FPGA1		0359282-01.15
		SPU FPGA2		0359283-01.18
		MTR DRV BOOTER		0359292-01.06
		MTR DRV APPLICATION		0359293-01.09
		PM BOOTER		0359295-01.10
		PM APPLICATION	0359296-01.16	
		RTR-111	03P9561(S-NXT)	0359485-01.29
		SPU BOOTER		0359285-01.09
		SPU APPLICATION		0359286-01.29
		SPU FPGA1		0359287-01.09
		SPU FPGA2		0359288-01.08
		SPU FPGA3		0359289-01.15
		SPU FPGA4		0359290-01.18
		MTR DRV BOOTER		0359292-01.06
		MTR DRV APPLICATION		0359293-01.09
		PM BOOTER		0359295-01.10
		PM APPLICATION		0359296-01.16
		RF-CON BOOTER		0359301-01.06
		RF-CON APPLICATION		0359302-01.08
ARPA RADAR/ CHART RADAR	FAR/FCR-2xx7 series	SPU (for Old IMO)		
		MAIN CPU	03P9337	0359204-02.54
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.001D
		DRAW FPGA		Ver.0006
		SPU (for FCR series)		
		MAIN CPU	03P9337A	0359204-03.13
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.C025
		DRAW FPGA		Ver.0006
		SPU (for IEC62388ED2)		
		MAIN CPU	03P9337C	0359204-04.12
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.0025
		DRAW FPGA		Ver.0006
		SPU(for FMD-3000 ser)		
		MAIN CPU	03P9337D	0359204-03.58
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.0025(DIPSW3=OFF)
		DRAW FPGA		Ver.0006
		SPU (for IEC62388 ED1)		
		MAIN CPU	03P9337E	0359204-03.14
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.0025
		DRAW FPGA		Ver.0006
		SPU (for fishing)		
		MAIN CPU	03P9337B	0359204-50.17
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.001D
		DRAW FPGA		Ver.0006
		RFC		
		MAIN CPU	03P9346A/B/C/D	0359202-01.48(Factory)
		RFC FPGA		0359202-G1.48(Filed)
MU-190	-----	Ver. 002C		
MU-231		265020-01.04		

Equipment	Model	Name & Type		Latest Version
		Name	Type	
	FCR-2**9 series	MAIN CPU	03P9337 D SPU(RPU-013)	0359204-03.59
		SPU FPGA		Ver.0061
		ECHO FPGA		Ver.C040(DIPSW3=ON)
		DRAW FPGA		Ver.0006
		EC-3000	Boot	2450075-03.32.0051
			System	2450076-03.32.0051
			Common	2450077-03.32.0051
			Radar	0359266-02.87
		MC-3000S	C/S MAIN	2450081-03.10
	FAR-3000 series	SPU(MAG)	Radar Sensor	0359281-01.29
		SPU(SSD)		0359286-01.29
		MTR		0359293-01.09
		P M		0359296-01.16
		RFC(Only SSD)		0359302-01.08
		PSU		0359299-01.07
		EC-3000	Boot	2450075-05.03.0059
			System	2450076-05.03.0059
			Common	2450077-05.03.0059
			Radar	0359266-05.05
		MC-3000S	Boot	2450080-01.07
			Main	2450081-05.03
			Maintenance	2450082-03.04
			I/O Main	2450084-01.04
BNWAS	BR-500	BR-510	20P8200B	2450056-02.04
		Starter		2450053-01.01
		Booter		2450054-01.06
		Application		2450056-02.04
		BR-520	24P0104	2450060-02.03
		Starter		2450057-01.01
		Booter		2450058-01.03
		Application		2450060-02.03
SDME	GS-100	GS-1001	20P8234A	
		Application		2051522-03.03
		GPS		4850263009
		GS-1001B		
		OS		2051590-01.01
		Application		2051591-01.01
		WMM		2051595-01.01
		GNSS		4850523014
		GS-1002	20P8209A	
		Application		2051552-04.01
		Boot		2051551-02.02
		Datum		2051604-01.01